

External Engine Start Switch Kit


The new kit allows you to start the engine from outside of the machine.

Quick installation


The kit can be easily installed on an existing machine. The estimated installation time is approximately half a day.

For jack operation only

This kit is intended for jack operation only not designed for swinging or traveling. Use the remote control to operate the jack (up or down).

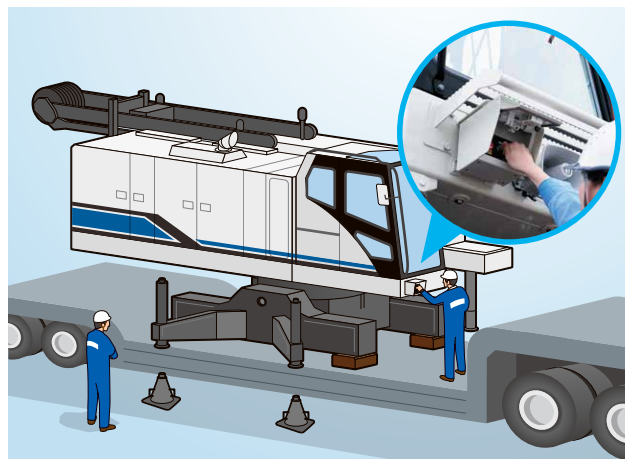

External engine start switch specifications

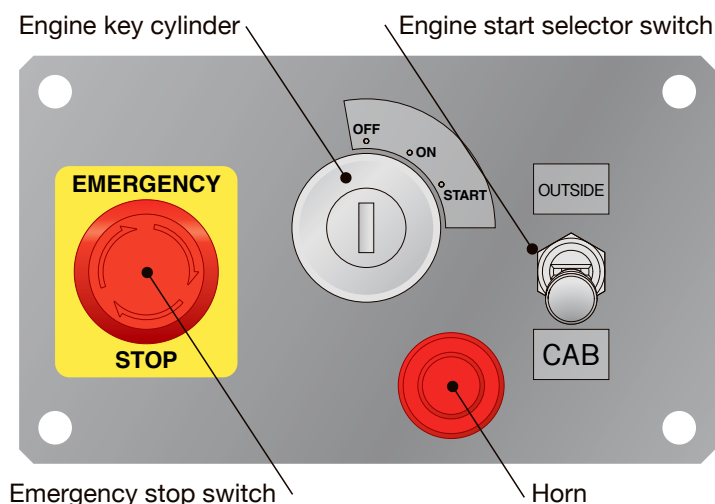

Operating procedure

- 1 Use the engine key to open the cover.
- 2 Set the engine start switch to "OUTSIDE."
- 3 When starting the engine, sound the horn to alert workers nearby.
- 4 Insert the engine key into the key cylinder, turn it to the start position, and start the engine.
- 5 Use the remote control to operate the jack (up or down).
- 6 Turn the engine key OFF to stop the engine.
- 7 Remove the engine key, and turn the selector switch to "CAB" position and close the cover.

Note: In an emergency, press the emergency stop switch to shut down the engine.

Compatible models

☐ SCX1000A-3 ☐ SCX1200-3 ☐ SCX1500A-3 ☐ SCX1800A-3

Note: Models other than those listed above will also become available in the future.

Consult with your nearest distributor for more information.

<https://www.hsc-cranes.com>

